


Using the Video Projector

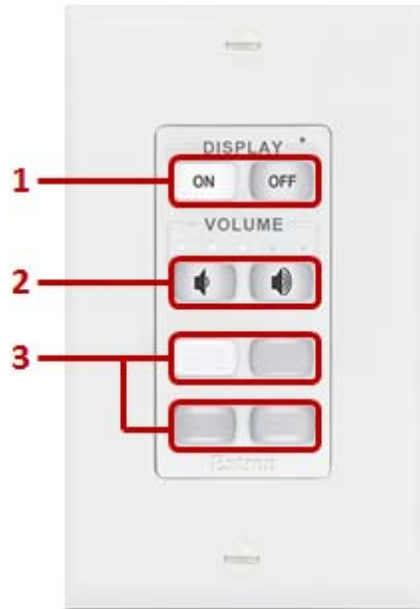

1. TURN ON VIDEO PROJECTOR. Turn off when finished.

- a. **Note:** Input source buttons WILL NOT work until the "ON" button stops flashing.

2. VOLUME CONTROL

3. SELECT THE INPUT SOURCE BUTTON FOR THE APPROPRIATE FUNCTION.

- **Mute** – Removes projected image from screen (Does not turn off projector).
 - Button blinks when activated; press again to deactivate.
 - This projector may have a MUTE timeout that causes the image to reappear after 20 minutes.