


Phaser 3610



black-and-white laser printer



Control Panel Overview

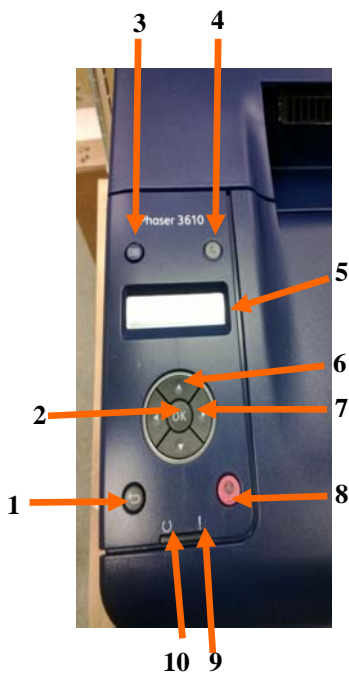

1	Back/Return: Moves up one level in the menu.
2	OK: Displays the selected menu or selects the current menu option.
3	Menu: Displays the Information Pages, Billing Meters, Admin, Tray Settings, and Panel Language menus.
4	Power Saver: Enters and exits low-power mode.
5	The control panel display provides information about settings, statuses, and error messages. An asterisk (*) next to a menu option indicates the current default setting.
6	Up and Down arrows: Navigates to the next menu, item, or option.
7	Left and Right arrows: Moves forward and backward through submenus or number fields. To display the Walk-up Features menu and to list Secure Jobs and Saved Jobs, press the Left arrow button.
8	Cancel: Ends the active print job.
9	Error Indicator -Lights red to indicate an error condition or warning that requires your attention. -Blinks red when an error occurs that requires technical support.
10	Ready Indicator -Lights green when the printer is ready to receive data. -Blinks green when the printer is busy receiving data.

PRINT

- With the desired document or graphic open in your application, access the Print dialog box by selecting Print from the File menu.
- Select the printer and click the Properties button to open the printer driver.
- Make selections from the driver tabs, if necessary.
- Click the OK button to save your selections.
- Click OK to print.

For more information, visit the XEROX product website <http://www.support.Xerox.com/support/> and input the product name 3610 and click on Documentation.