



## PRINT

- With the desired document or graphic open in your application, access the Print dialog box by selecting **Print** from the File menu.
- Select the Phaser printer and click the Properties button to open the printer driver.
- Make selections from the driver tabs, if necessary.
- Click the OK button to save your selections.
- Click OK to print.

## CHANGING PAPER TYPE

After loading paper in the paper tray, set the paper size, type and color using the control panel. After closing the paper tray the paper size, type and color are automatically displayed. Using the settings displayed or the steps below, change the settings to match the Paper Size and Type of paper loaded.

- At the control panel, touch **Printer**.
- Touch the **Tools** tab, then touch **Tray Management**.
- Touch **Tray Settings**, then select a dedicated tray.
- To modify the tray settings, touch **Edit**.
- Select **Size**, **Type**, or **Color**.
- Use the **Up** or **Down Arrow** as needed to select the desired paper setting.
- Touch **OK**.